



## INSTRUCTIONS FOR USE

Congratulations on your purchase of your Handy Smoker Cup Cover!  
Please follow these instructions for truly delicious results:



**Step 1:** Prepare your Handy Smoker smoke infuser for use.

**Step 2:** Fill a cup or glass with a liquid or beverage you would like to infuse with smoky flavor.

**Step 3:** Insert the nozzle end of the extension hose into your Handy Smoker Cup Cover<sup>TM</sup>. Place the Cup Cover over your filled cup or glass. The nozzle may be inserted deep into the liquid to bubble up smoke through the beverage, or it may be inserted only into the air space between the liquid and the lid, to fill the air above the drink with smoke.

**Step 4:** Flip the switch on your Handy Smoker to lowest setting. The fan should start blowing air gently through the extension hose. Light the wood chips in the wood chip cup, using a wooden match or long-nosed lighter. \*BE CAREFUL AROUND OPEN FLAMES\* Smoke will begin to blow out of the extension hose.

**Step 5:** Fill the cup or glass with smoke for a few seconds. After it is filled with smoke, turn off and let stand for 10-40 seconds.

**Step 6:** After the desired flavor is achieved. Then uncover your food or beverage, serve and enjoy!

**Pro Tip:** Experiment with different lengths of time of exposure to the smoke to determine your favorite depth of smoky flavor!

**Care and Maintenance:** Clean with dishwashing liquid and water after each use, by hand or in the dishwasher.



For tips & tricks, accessories, special offers and customer service, visit:

**[handysmoker.com](http://handysmoker.com)**